Recess Mini Mount
Installation Instructions

-To be installed prior to siding-

Step 1
Remove the Trim Ring from the Recess Mini Mount and fasten the mount in the desired location. See Figure 1 at right.

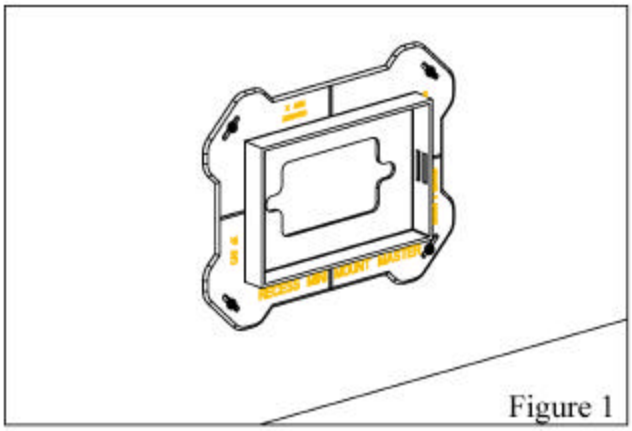
Figure 1

Step 2
Cut the siding around the Recess Mini Mount. Install the siding according to the manufacturer's installation instructions. See Figure 2 at right.

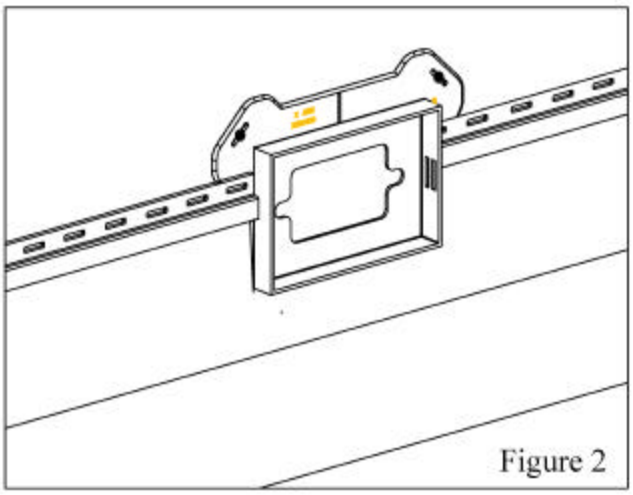
Figure 2

Step 3
Install the Trim Ring by locking it into place. See Figure 3 at right.

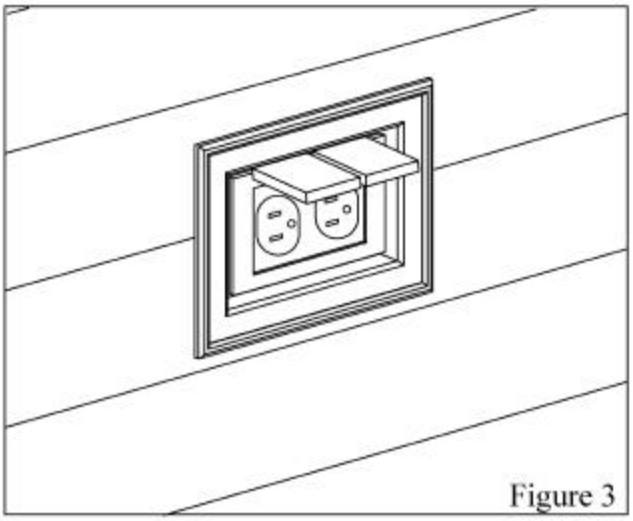
Figure 3

I-0064
PAPC9404
06-20-01